

PLASTIC BUMPER REPAIR

How to repair a common bumper bar scratch in seven simple and easy steps.



1

Sand area to be repaired with 240 grit sandpaper, removing a fine layer off the surface.

2

Clean the sanded area with Septone Wax & Grease Remover.



3

Mask off the area to be repaired. Spray two light coats of Septone Plastic Adhesion Primer, allowing 5-10 minutes drying time between coats.



4

Apply Septone Plastic Primer Filler in light even coats. Allow 5min dry time between each coat.



5


Sand it again with 800-1200 wet & dry sandpaper & reapply Septone Plastic Primer Filler if needed.

6

Once sanding is completed, re-clean repaired area with Septone Wax & Grease Remover.

7

Your repair is now ready for application of a coloured basecoat. Select a basecoat colour matched to your original vehicle paint code and apply as directed on the back of the can.

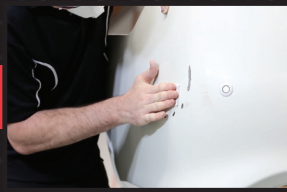

PLASTIC BUMPER REPAIR

WHAT YOU'LL NEED TO COMPLETE THE JOB

- Septone Wax & Grease Remover
- Septone Plastic Adhesion Primer
- Septone Plastic Primer Filler
- Sandpaper 240 Grit
- Sandpaper 800-1200 Grit
- Wet & Dry
- Clean Rags
- Septone Filler Applicator
- Masking Tape



PLEASE NOTE: Information on this brochure is ITW AAMTech's opinion, and we do not warrant the accuracy or completeness of this information. ITW AAMTech excludes all liability in relation to the statements in this brochure.

AAMT0006
15/02/2016



9 313008 024307 >

NEED HELP?
WATCH D.I.Y. VIDEO »

or visit www.septone.com.au